


# W295cm x D295cm x H230cm INSTRUCTIONS




## UNPACK, MAKE SURE ALL PARTS ARE INCLUDED

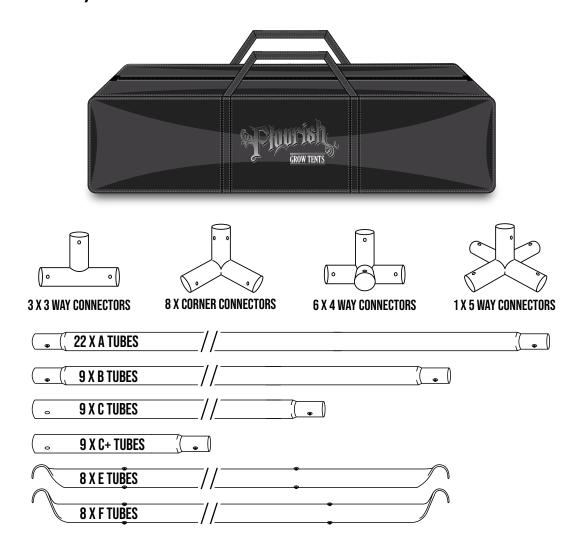


**1X FLOURISH GROW TENT** 





# UNFOLD AND LAY THE TENT FLAT ON THE FLOORT, ASSEMBLE THE FRAME ON THE FLOOR OF THE TENT STARTING FROM THE BASE AND WORK YOUR WAY UP


YOUR TENT MAY BE A DIFFERENT SIZE OR SHAPE BUT THE PROCEDURE WILL BE THE SAME

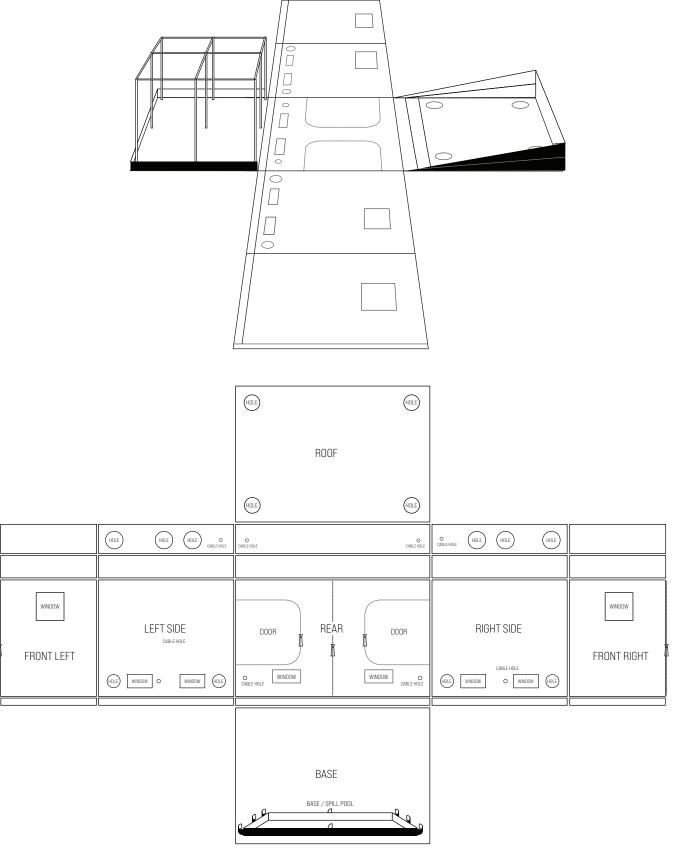

#### IF YOU DO NOT PLAN TO USE THE EXTENSION LEAVE THE C+ POLES OUT










3 X T- CONNECTORS

8 X CORNER CONNECTORS


1 X 5 WAY CONNECTOR

**6 X 4 WAY CONNECTORS** 

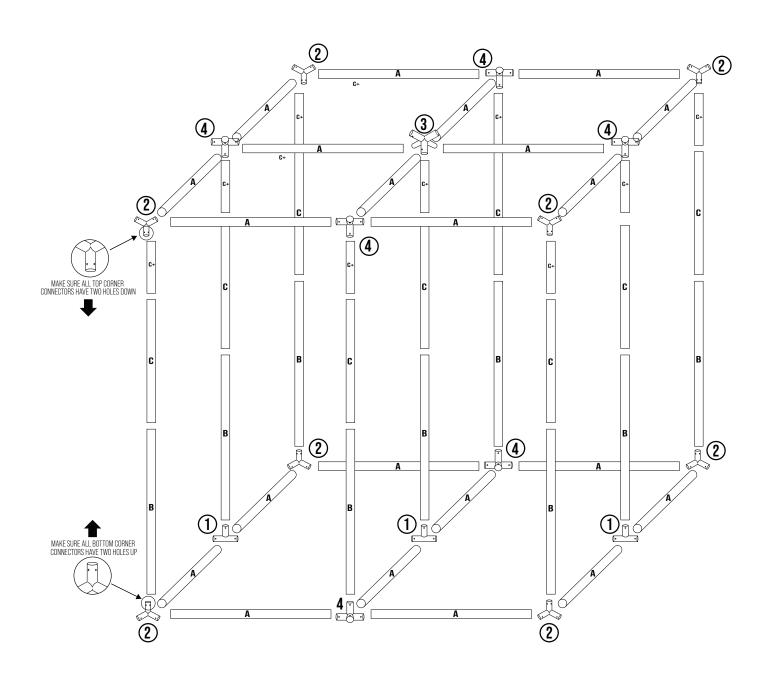


#### PLACE ROOF ONTO TENT FRAME.

CAREFULLY GUIDE EACH CORNER OF THE ROOF OVER EACH CORNER OF THE FRAME A LITTLE AT A TIME. THIS WILL ALLOW PLENTY OF SLACK TO PROPERLY FIT THE CORNERS. DO NOT FULLY SEAT THE ROOF AT ONE CORNER AND ATTEMPT TO STRETCH CORNERS. OVER FRAME. DO NOT USE EXCESSIVE FORCE. DOING SO MAY DAMAGE YOUR TENT AND VOID WARRANTY.

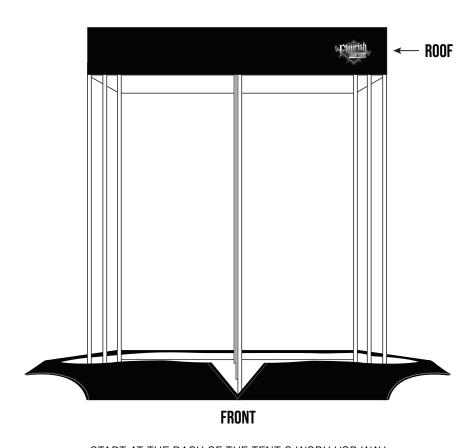


START AT THE BACK OF THE TENT & WORK YOR WAY AROUND TO THE FRONT ZIPPING THE EXTENSION SKIRT IN PLACE AS YOU GO. [ IF YOU ARE NOT USING THE HEIGHT EXTENSION, MOVE TO THE NEXT STEP ]

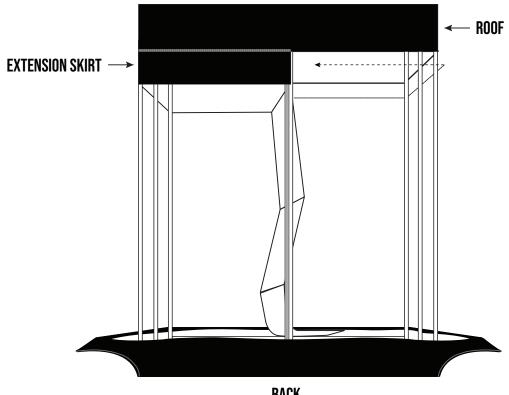


**PAGE FOUR** 

**BACK** 


BRING THE TENT BODY TO THE VELCRO ASSIST STRIPS AND CONNECT THE ROOF OR EXTENSION VIA THE ZIP.

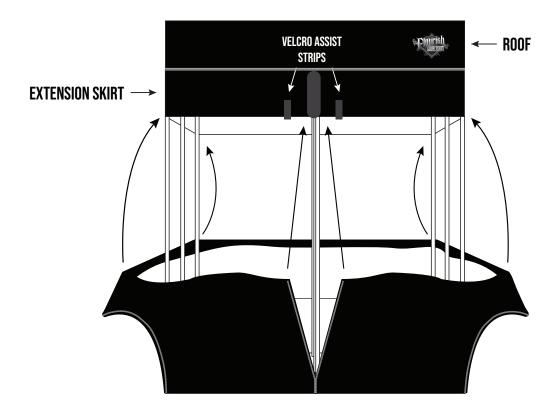

ONCE THE WALLS ARE UP AND ZIPPED IN PLACE ADD ROOF SUPPORT BEAMS. POSITION E POLES, THEN F POLES. E POLES ARE LOAD BEARING.

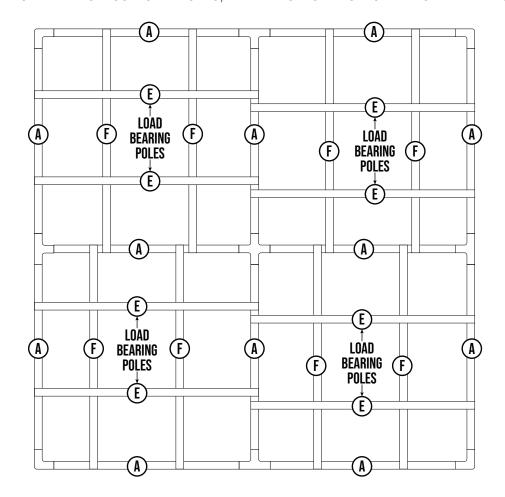

## PLACE SPILL POOL ON THE FLOOR OF TENT AND SECURE VELCRO STRAPS AROUND POLES.

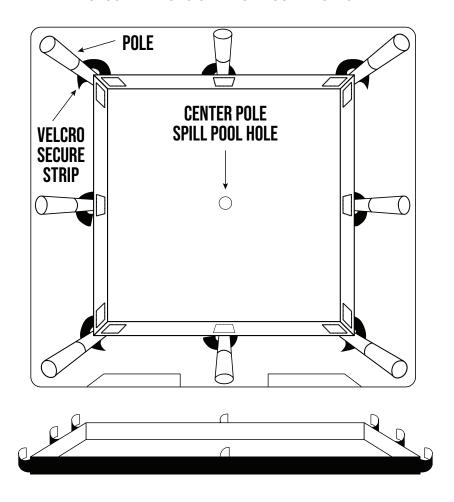



flourishgrowtents.com

#### sales@rootzdistribution.com

